



Antennas

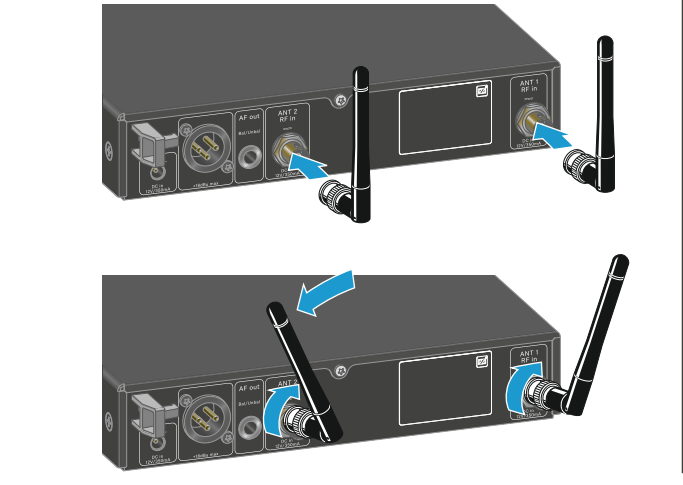

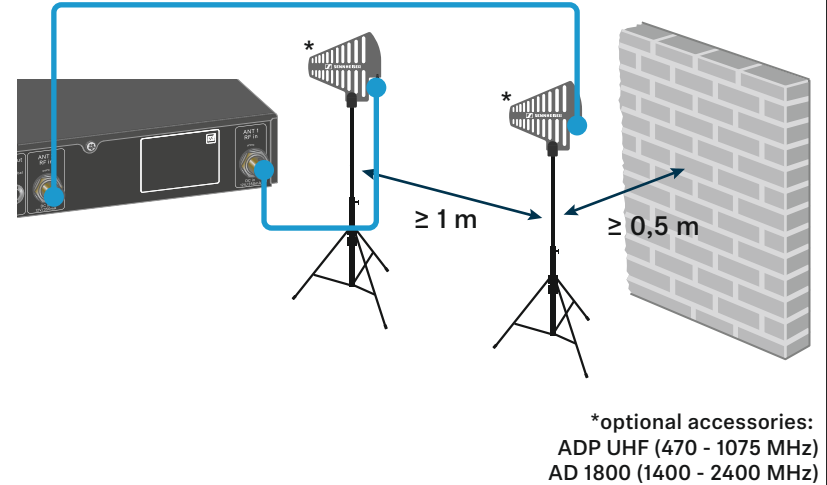

*optional accessories:
ADP UHF (470 - 1075 MHz)
AD 1800 (1400 - 2400 MHz)



www.sennheiser.com/download

Smart Assist



Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 03/24, 583962/A05




Evolution Wireless Digital

EW-D EM
EW-D SK
EW-D SKM-S

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드


Audio Out

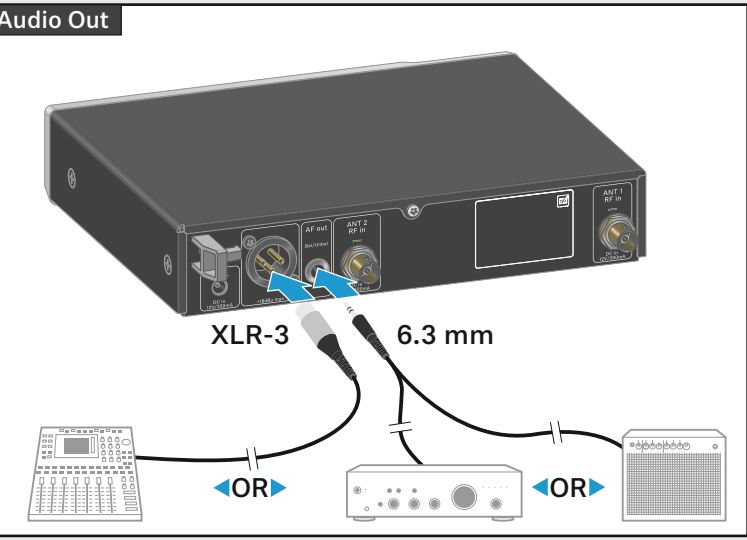

XLR-3 6.3 mm

OR

Power supply

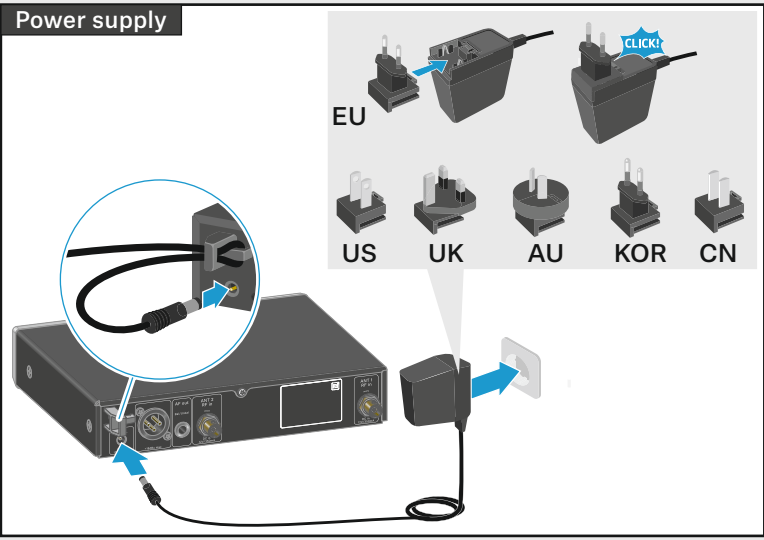

EU US UK AU KOR CN

Smart Assist

The Smart Assist app simplifies your workflow



Smart Assist app provides automated setup, operation and monitoring using any iOS or Android device




Intelligent setup automatically creates reliable wireless connections, no wireless expertise required




Mobile access to all system settings centralizes control and eliminates the need for complicated menu navigation on each device



Easy frequency allocation and wireless channel naming help to keep systems organized

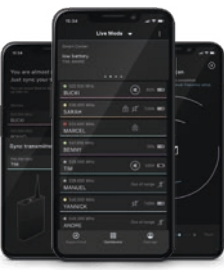

In the box

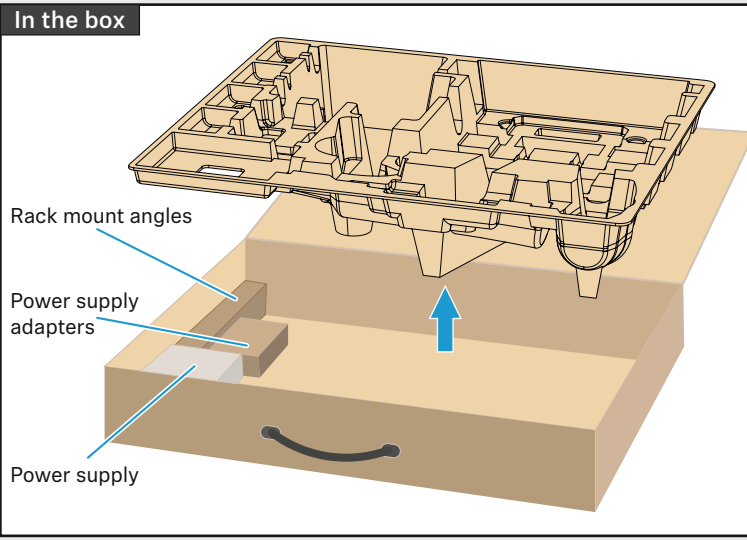


Rack mount angles

Power supply adapters

Power supply

Battery

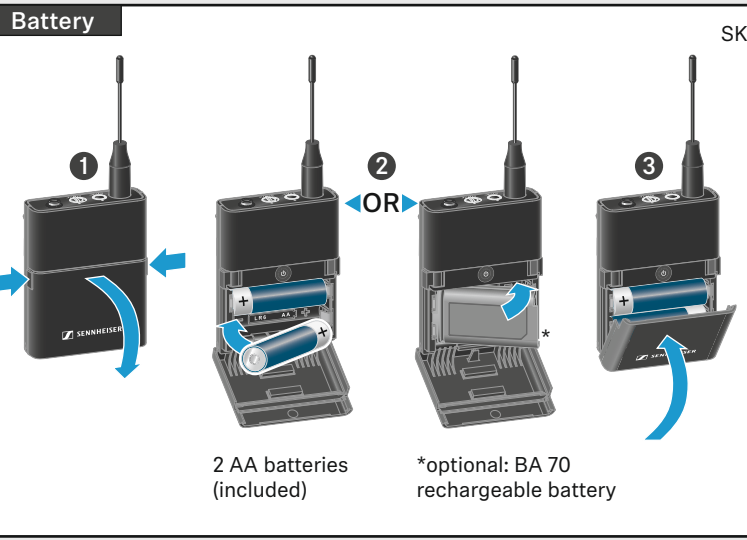


1 2 3

2 AA batteries (included)

*optional: BA 70 rechargeable battery

SKM-S

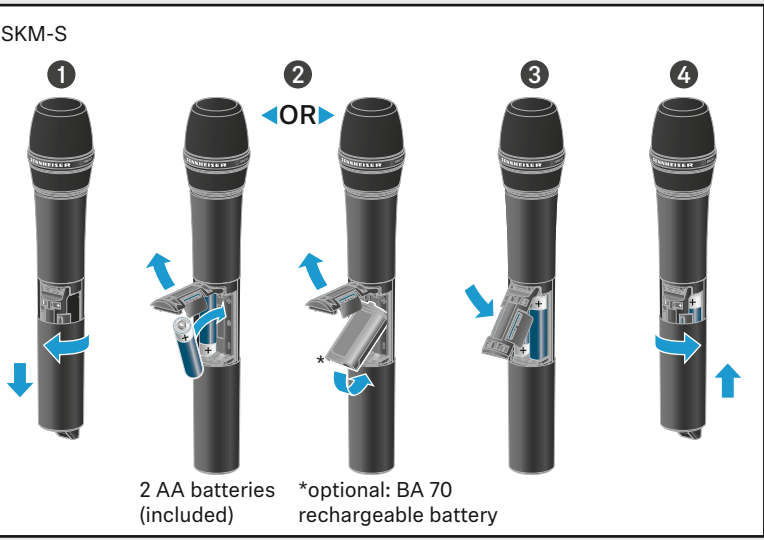


1 2 3 4


2 AA batteries (included)

*optional: BA 70 rechargeable battery

EW-D EM

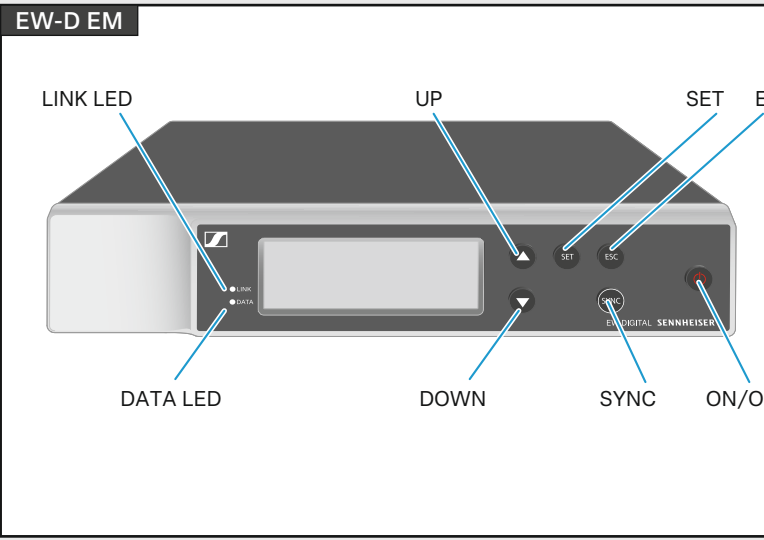


LINK LED DATA LED UP DOWN SET ESC SYNC ON/OFF

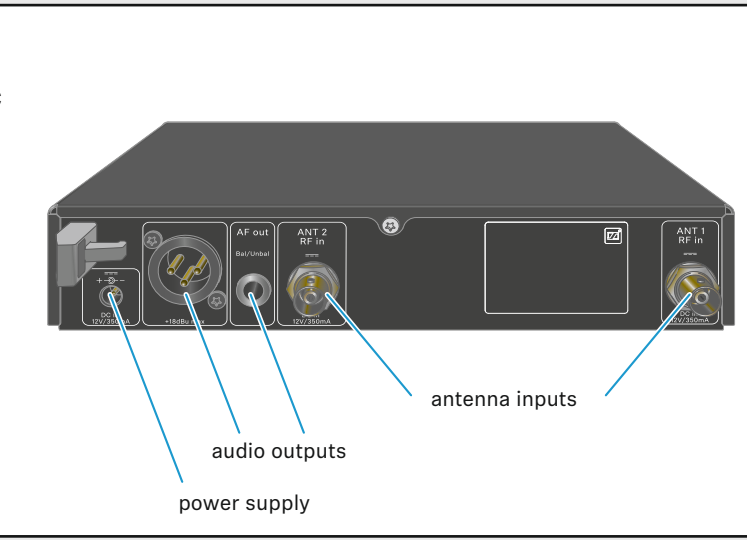

power supply audio outputs antenna inputs

On/Off

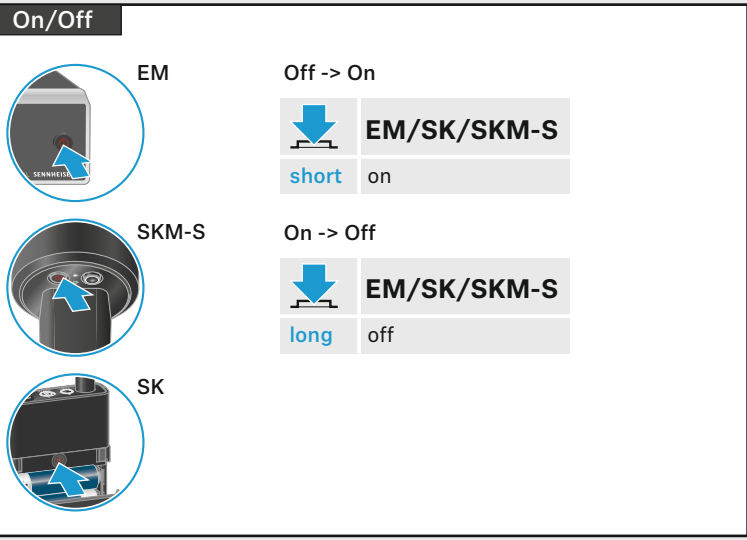

EM SKM-S SK


Off -> On

 **EM/SK/SKM-S**
short on

On -> Off

 **EM/SK/SKM-S**
long off

Identify/Battery check

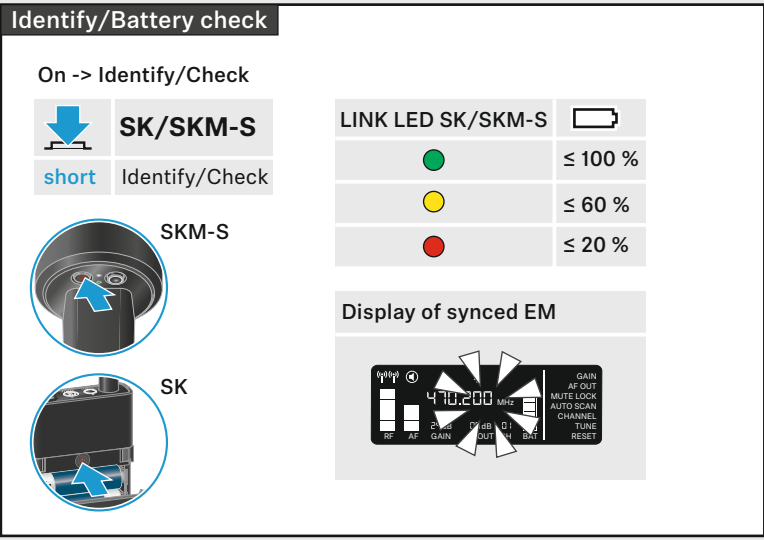

SKM-S SK

On -> Identify/Check


 **SK/SKM-S**
short Identify/Check

LINK LED SK/SKM-S	
	≤ 100 %
	≤ 60 %
	≤ 20 %

Display of synced EM




EW-D SKM-S

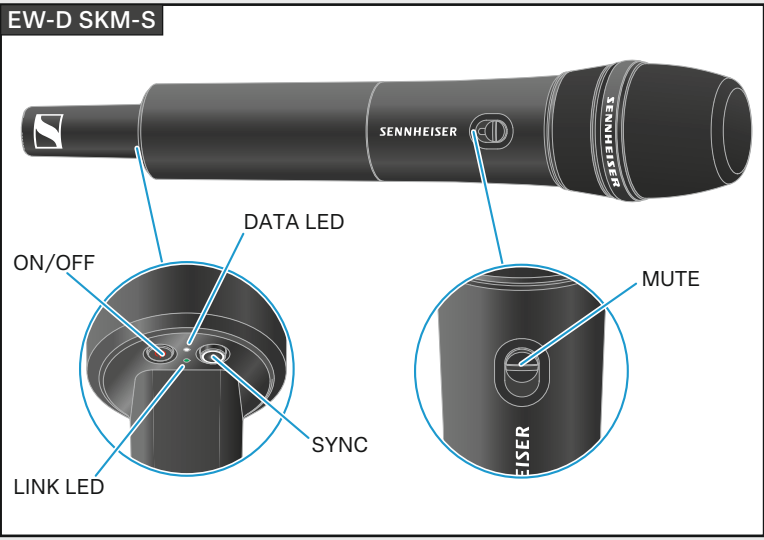

ON/OFF LINK LED DATA LED SYNC MUTE

EW-D SK

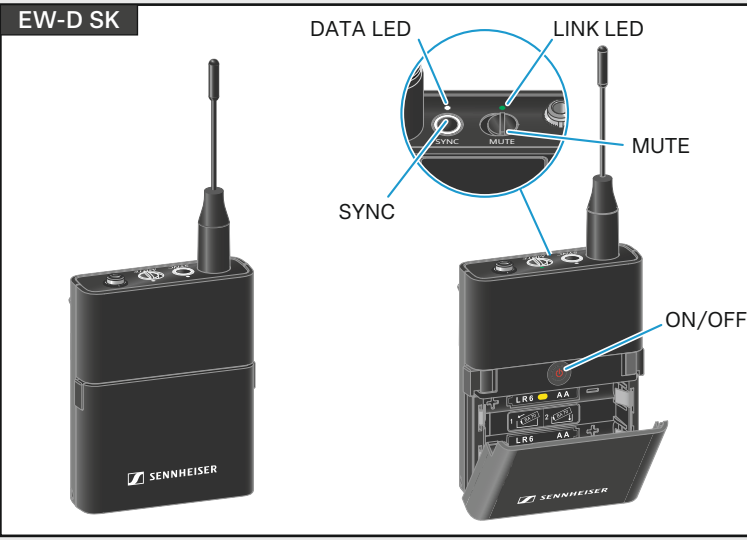

DATA LED LINK LED SYNC MUTE ON/OFF

Display

Antenna switching diversity

Mute lock

Mute

Frequency

App connection

Key lock

Menu

Radio frequency level

Transmitter audio level

Gain

Audio output level

Channel

Transmitter battery

?

→

Instruction Manual

Menu

Gain

AF Out

Mute Lock

Auto Scan

Channel

Tune

Reset

?

→

Instruction Manual

www.sennheiser.com/download

Instruction manual

Bedienungsanleitung

Notice d'emploi

Istruzioni per l'uso

Instrucciones de manejo

Manual de instruções

Gebruiksaanwijzing

Instrukcja obsługi

Bruksanvisning

Betjenings vejledning

Käyttöohje

Οδηγίες λειτουργίας

Kullanım kılavuzu

Инструкция по эксплуатации

使用说明书

取扱説明書

사용 설명서

Smart Assist

Available on the App Store

ANDROID APP ON Google play

LEDs

LINK LED

DATA LED

EM

SKM-S

SK

LINK ok

audio active

Link ok

audio muted or no capsule on SKM

Link ok

audio clip

No link

Link ok

Low transmitter battery

No link

Device switched off

Bluetooth active to

sync with transmitter

connect with app

Firmware update in progress

DATA

LINK

?

→

Instruction Manual

Sync

EM

SKM-S

SK

short press

short press

short press

?

→

Instruction Manual

Key lock

press both

unlocked

locked

?

→

Instruction Manual

Mute

SK

SKM-S

Mute Lock

→

Instruction Manual

Color coding sets

optional accessories for EM, SK and SKM-S

wireless link 1

wireless link 2

etc.

etc.

?

→

Instruction Manual

SKM-S

correct usage

incorrect usage

ME 2

ME 3

ME 4

25 cm (10")

2...3 cm (1")